

2

Section 2 – Preparation for Use

2.1 Unpacking and Inspection

Inspect the shipping carton immediately upon receipt for evidence of mishandling during transit. If the shipping carton is severely damaged or water-stained, request that the carrier's agent be present when the carton is opened. If the carrier's agent is not present when the carton is opened and the contents are damaged, keep the carton and packaging materials for the agent's inspection.

It is suggested that all salvageable shipping cartons and packing material be retained for future use in the event the product must be shipped.

2.2 Installation Considerations

If any Power Output Modules (AOM, ASM, IOM) are used in the HMR, an external 24vdc supply will need to be connected to the TB1 and/or TB3, 8 Pin Phoenix connector.

2.3 User-Configurable Jumpers and Options

The diagrams on the following pages provide information on user settable jumpers and options.

Figure 2-1. HMR – 4000 rear view

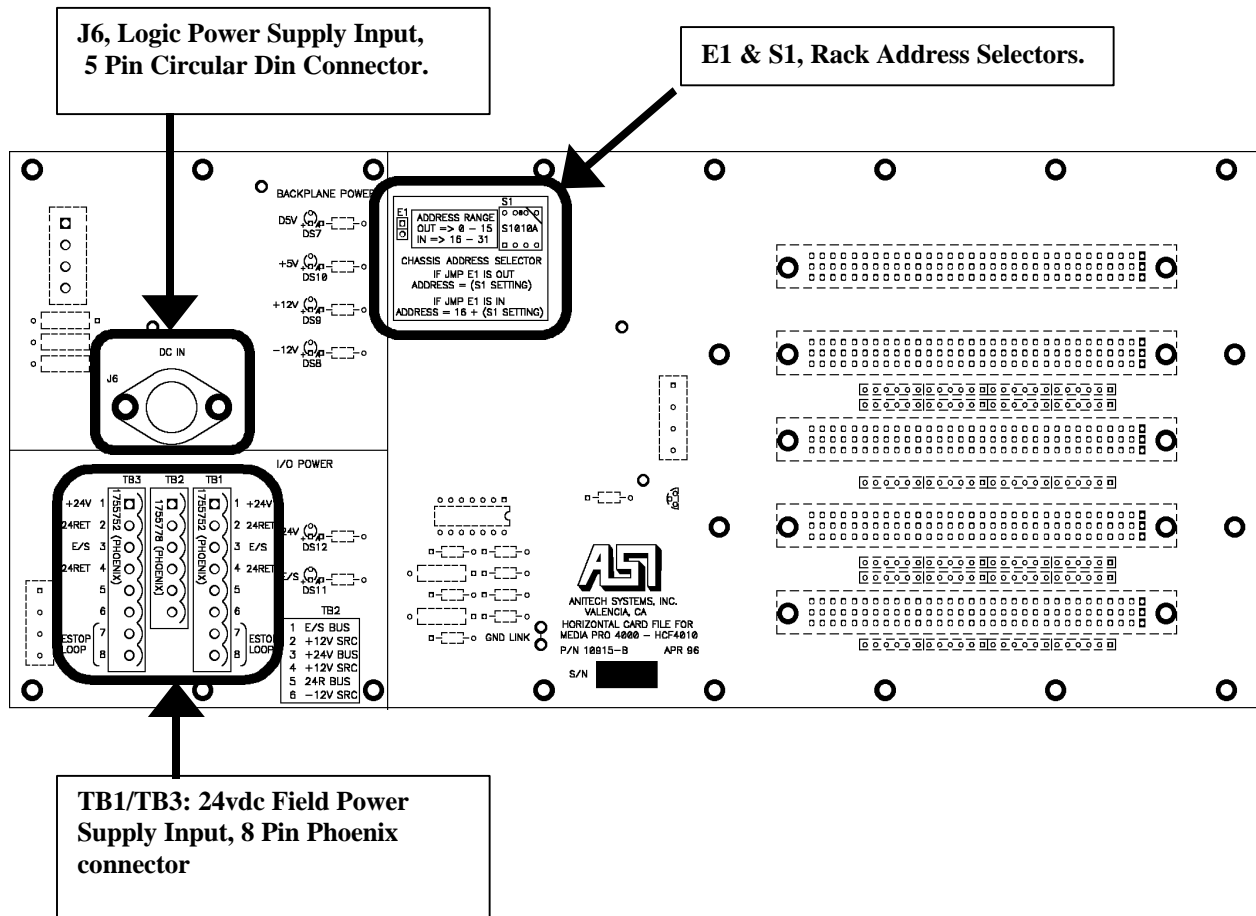


Figure 2-2. Jumpers Setting Information

